



PREPARING THE ELECTRONICS






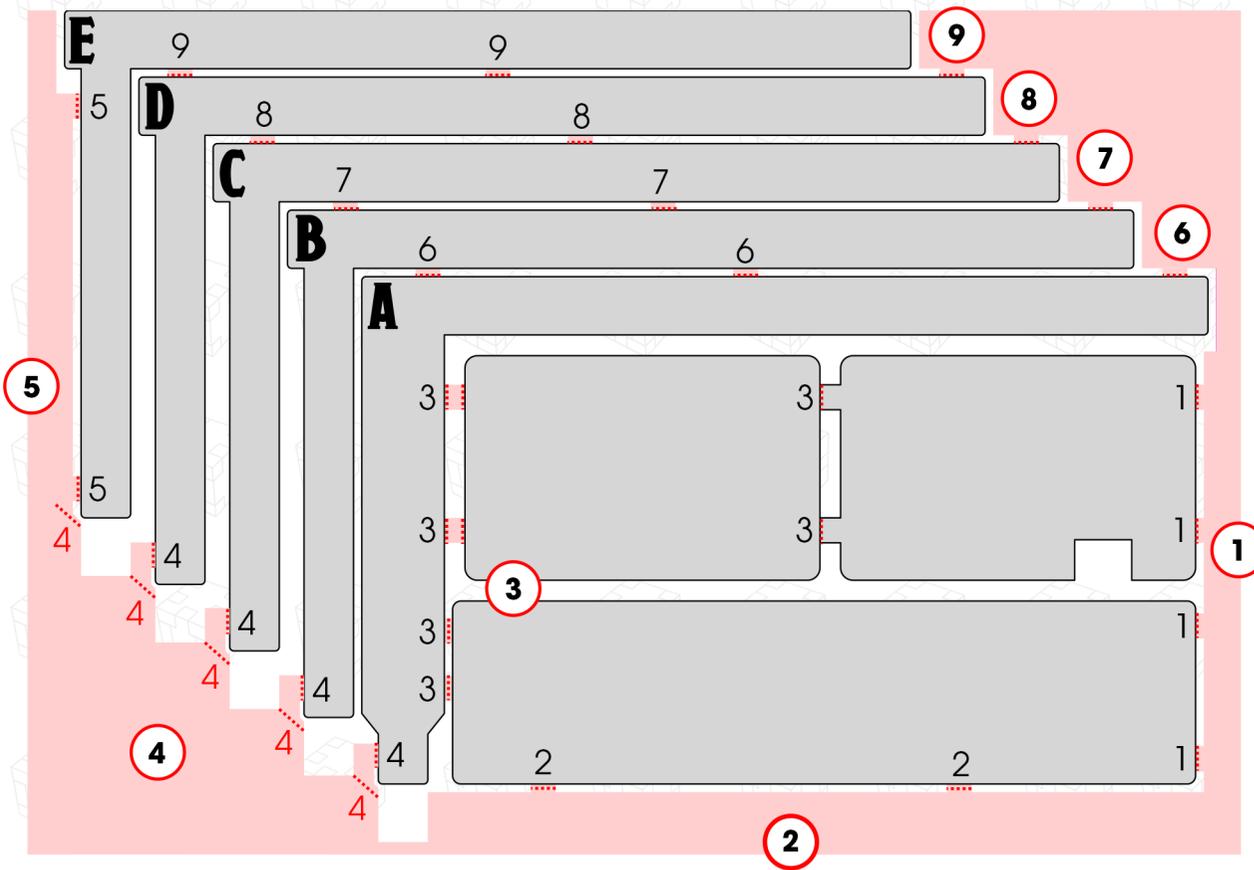


STARTING WITH STEP 1

- Place one hand on the board (avoiding components) in the **grey** area as near as you can to the break points (shown as **red dotted lines**)
- Using your other hand, slowly bend the **pink** area upwards to free it from the board.
- Ensure **every break point** related to that step has been freed before moving to the next step.
- When you reach **Step 4**, break all the **red "4"** pieces at the same time before proceeding with the Step.

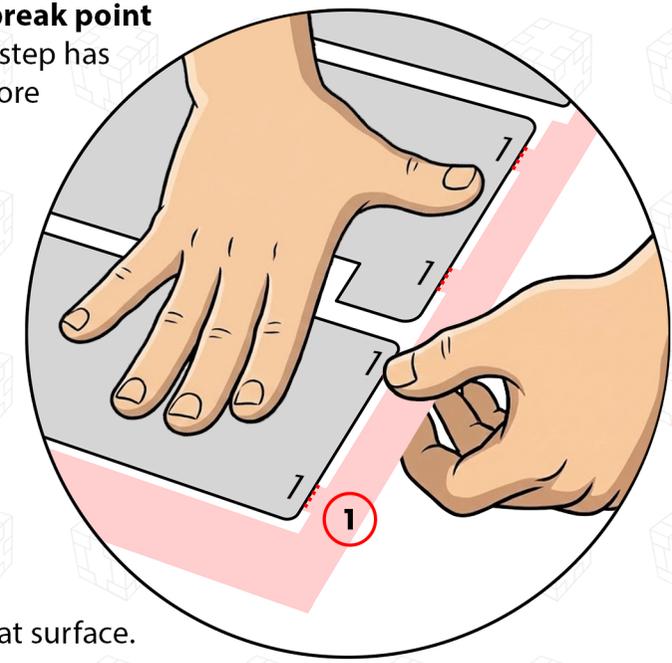

TIP!
Use a strong, flat surface.

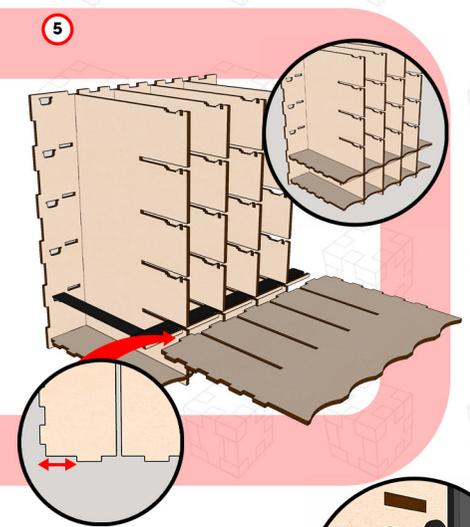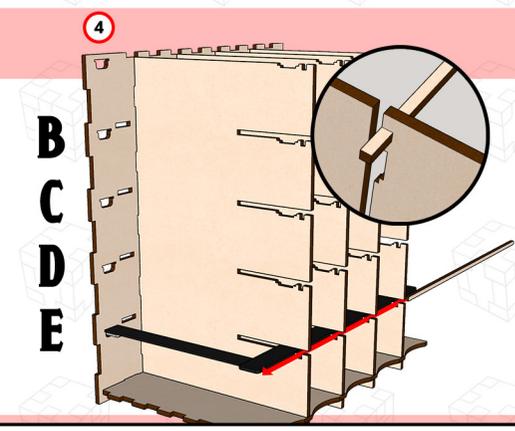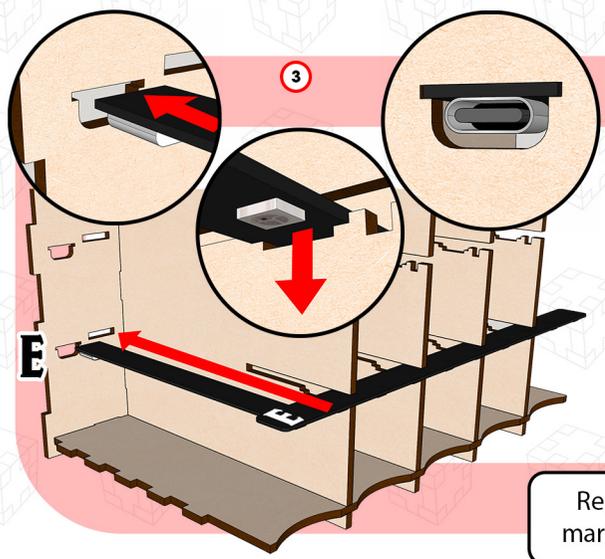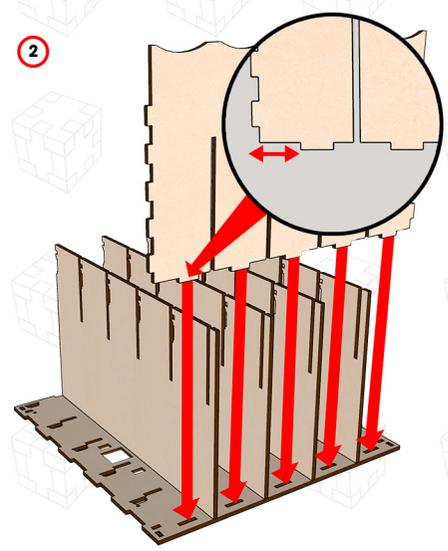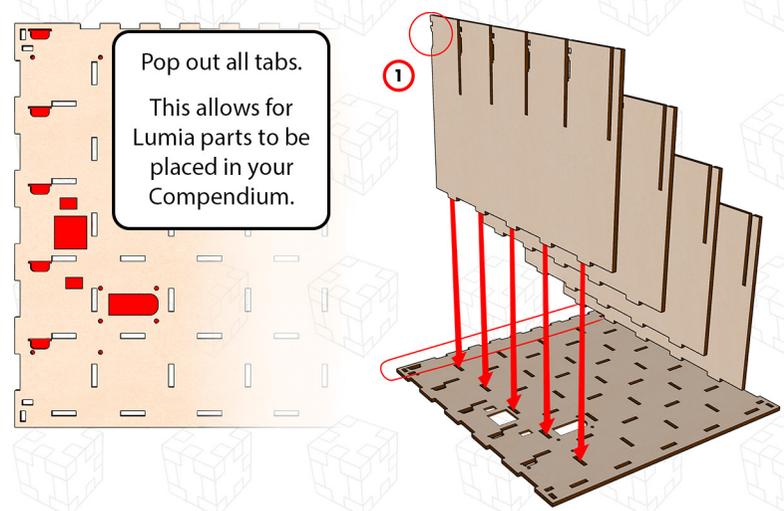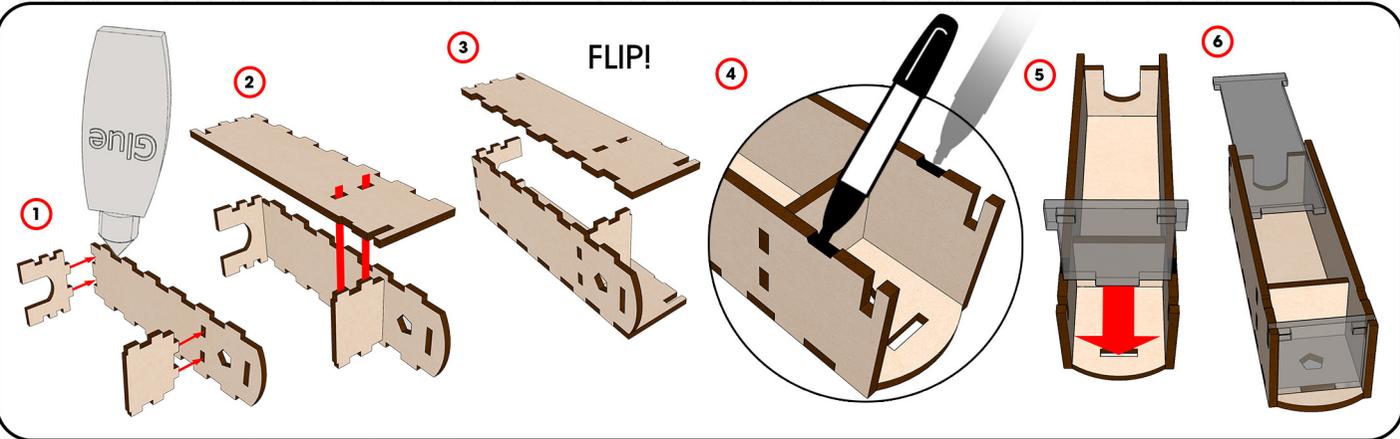

Repeat Steps 3 - 5 for each shelf. Check the **letter** marked on each board and ensure it matches above.

